


# Technical Note

## VE210 Fill Pack Installation



When installing VE210, the installer should take special care to insure that the packs are correctly aligned with each other. The correct alignment of the sheets is shown below when viewed from the end of the packs. Note that the packs with “A Orientation” have a “short flute at the upper left side and a “long flute” on the right; the packs with “B Orientation are exactly the opposite. In order to prevent the packs from nesting, the packs must be installed as shown below. The example below indicates a typical installation of 18” wide packs (22 sheets) installed in a 6’ bay.

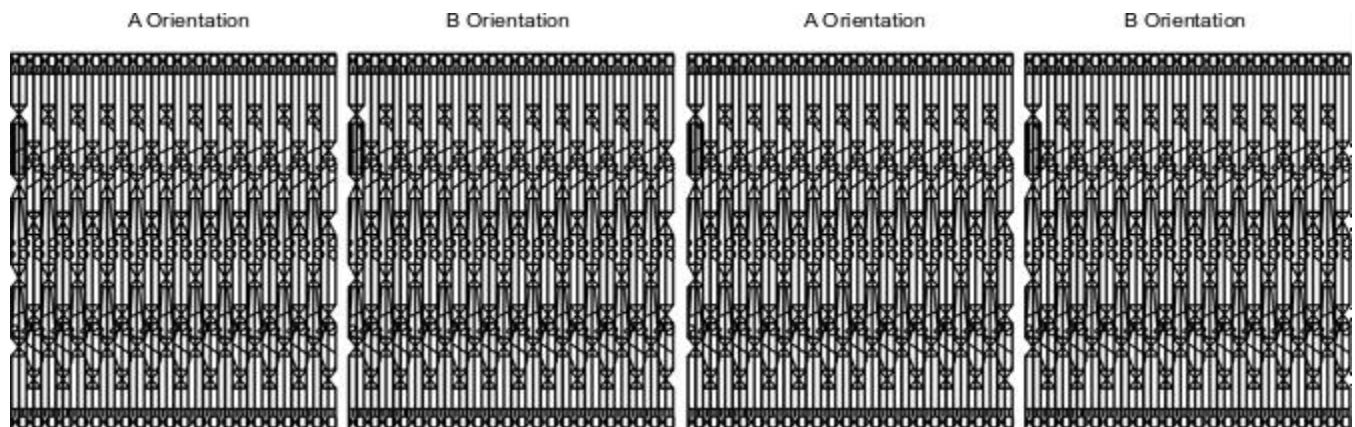

NOTE: Packs with an odd number of sheets will have short flutes on top section of both sides and long flutes on bottom. To prevent these packs from nesting, install one pack with short flute up and next pack with short flute down. This “flipping” method will insure a proper orientation as illustrated above, (short flute next to long flute).